

Owner's Manual

Model Series 850 Single-Function Remote Control

Model Series 853 Multi-Function Remote Control

Model Series 856 Mini Multi-Function Remote Control

The 800 Series remote control (with green battery test light) works only with door openers and light controls having a green "SMART" button and green indicator light.

Programming instructions are described and illustrated below. The additional push buttons on the Multi-Function Remote Controls can also activate other garage door openers and/or light controls. (Instructions for programming light products are included with those accessories.)

"SMART" GARAGE DOOR OPENERS

(With Green "SMART" Button
and Green Indicator Light)

PROGRAM THE OPENER TO ACCEPT THE REMOTE CONTROL CODE

Select a remote control push button to operate the opener. The *large* button is recommended for use with a garage door opener.

1. Press and HOLD the selected remote control push button (Figure 1).
2. Then press and release the green "SMART" button on the opener panel (Figure 2). The opener light will FLASH once. Release the remote control push button.

Now the opener will operate when the remote push button is pressed.

NOTE: If the remote push button is not held down until the opener light flashes, the receiver will not accept the code.

TO ERASE ALL REMOTE CONTROL CODES

- Press and hold the the green "SMART" button on the opener panel until the indicator light turns off (about 6 seconds). **ALL the codes the opener has learned will be erased.**
- To reprogram, repeat Steps 1 and 2 for each remote control in use.

Code programming instructions are also located on the opener panel.



WARNING

Children operating or playing with a garage door opener can injure themselves or others. **The garage door could close and cause serious injury or death.** Do not allow children to operate the door control or remote control transmitter(s).

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

Figure 1


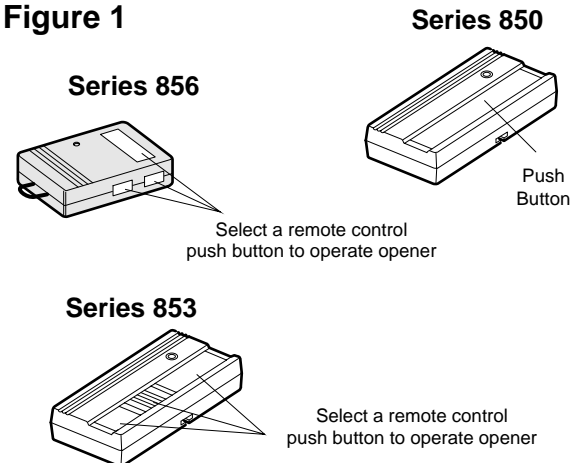


Figure 2

Garage Door Opener (With Green "Smart" Button)

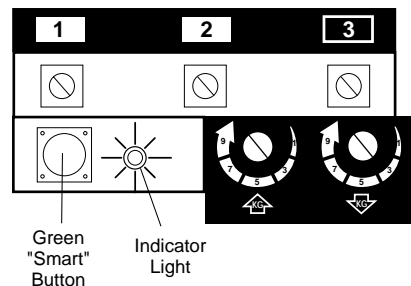

Replacement Parts:

Single-Function remote case, cover, screw
(circuit board not included) Model 850 41A3984-5

Multi-Function remote case, cover, screw
(circuit board not included) Model 853 41A3888-3

Mini Multi-Function remote case, cover and interlocking touch tab strip
(circuit board not included) Model 856 41A3985-6

12 Volt battery 10A14

Visor Clip 29C128